



DC136 Firmware(FW) Update Manual

1. Connect DC136 with a PC through USB cable.

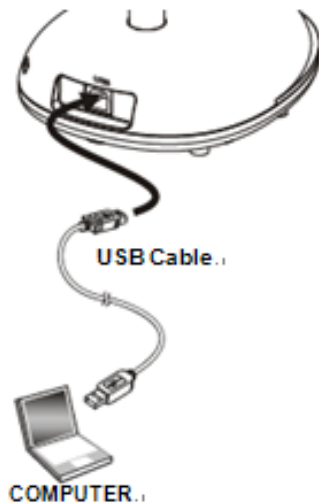


2. Run the [SFWriteTool_AllIC_v30021]

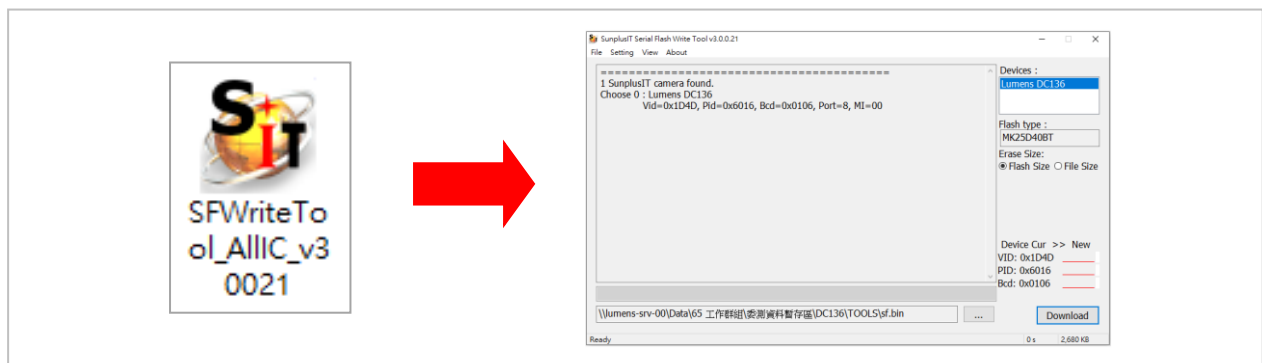


3. Press [...] to browse the file and select the file downloaded from website.

⚠ Note: Remember to unzip the file to [.bin].

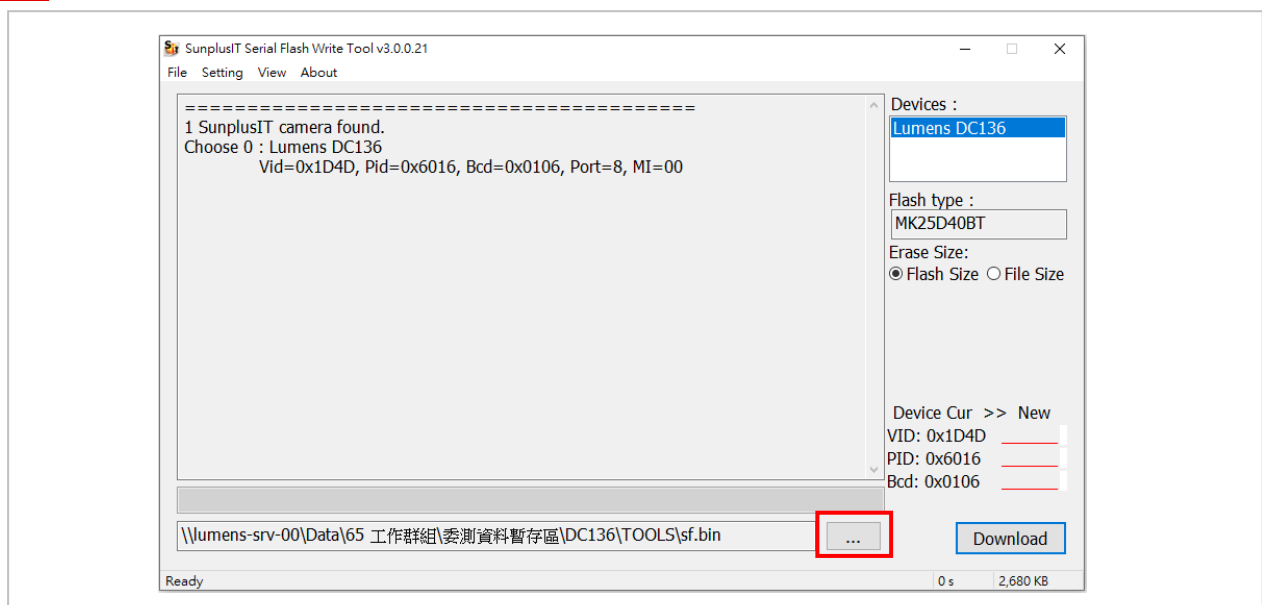


4. After the [.bin] file selected, please press [Download] to start the process.

⚠ Note: Wrong FW download will cause the unit not work.

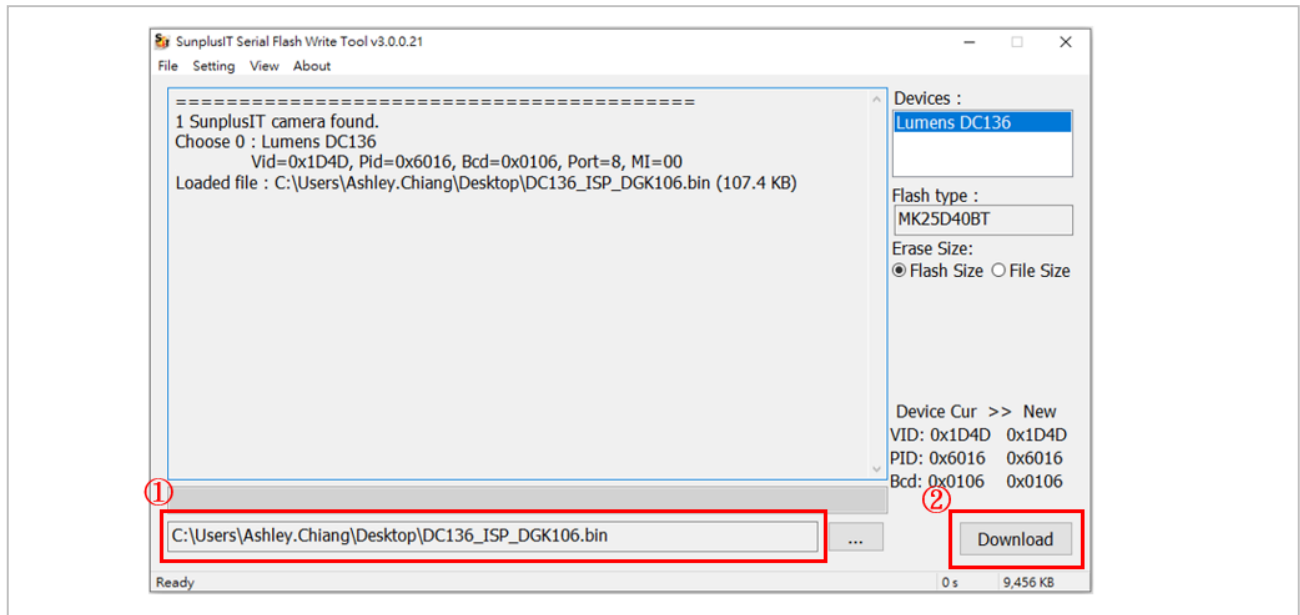

5. When the process is finished, it will show “Success” in the status box, and then you can close the screen.

⚠ Note: Please do not stop the running process which may cause the unit not work.

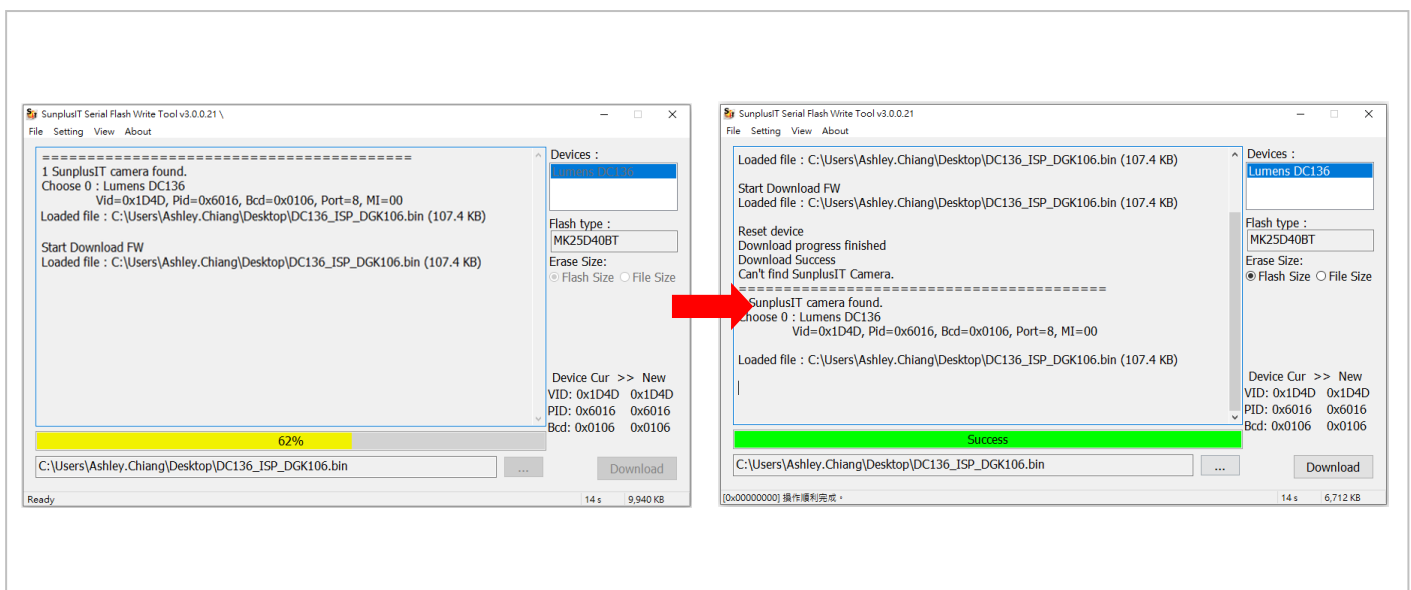

6. Done.