


# DC193 - Firmware(FW) Upgrade Instruction

## 1. Before FW upgrade, please check the current FW version of DC193.

([Menu]→ [Setting]→ [Advanced]→[Firmware Version])

\*\* There are two different FW code DGCxxx and DGHxxx. Please make sure the codes of current and new FW are the same.

\*\* Different FW code can't be upgraded.

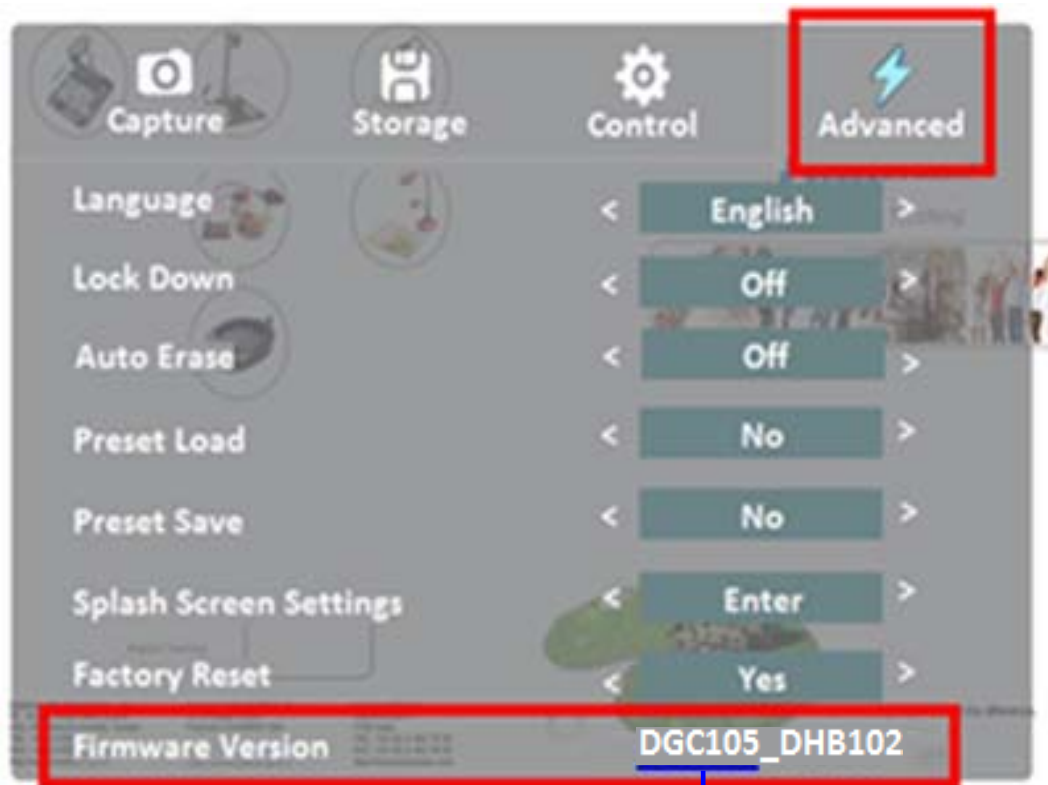


Master FW version


## 2. Save the FW file "DGCXXX.BRN" or "DGHXXX.BRN" into a USB flash drive.

- Please put the "unzipped" file into USB flash drive.
- Put the FW files in the Root directory, not subdirectory.
- If two more firmware files coexist in the USB flash drive, the unit will always detect the latest version.

3. Plug in the power cord and connect the unit with a monitor/projector.

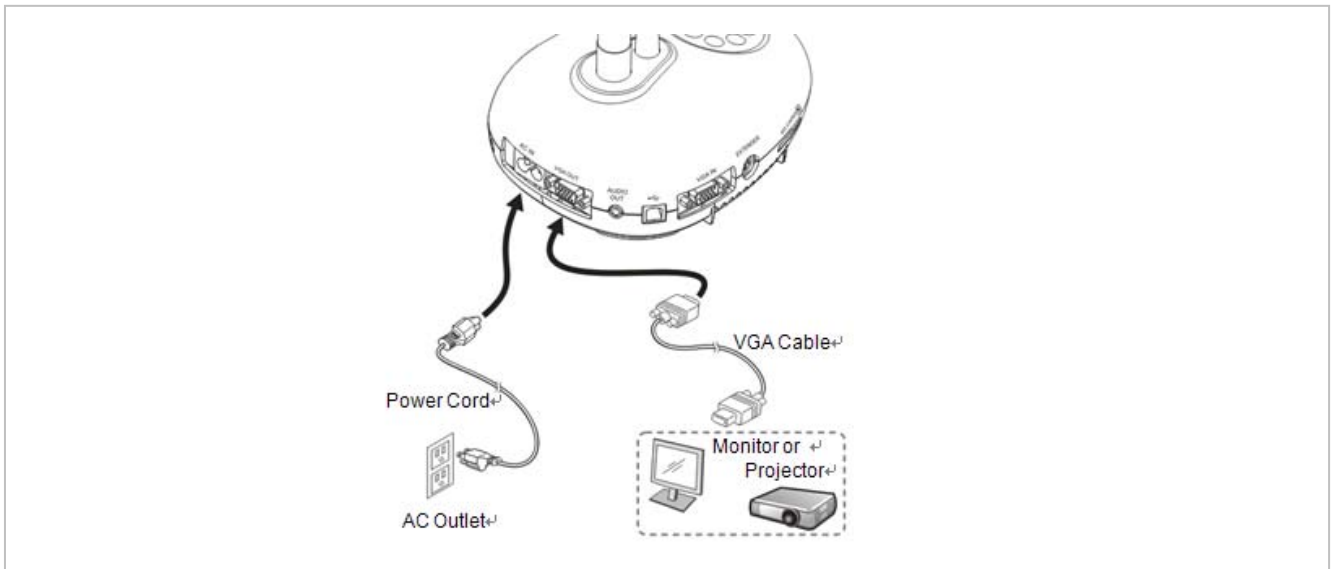


4. Insert the USB flash drive into the USB port.

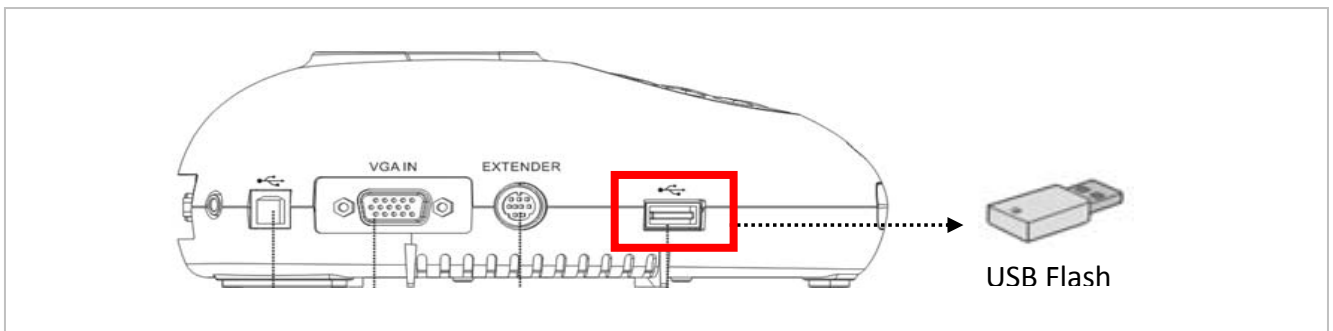

5. Power on the unit and access the service menu

- Please use Keypad to call the “Service Menu”.
- Press “Enter”(do not release), then press” Zoom+”, hold both buttons in a second, then the “Service menu” will be shown on screen as following picture.

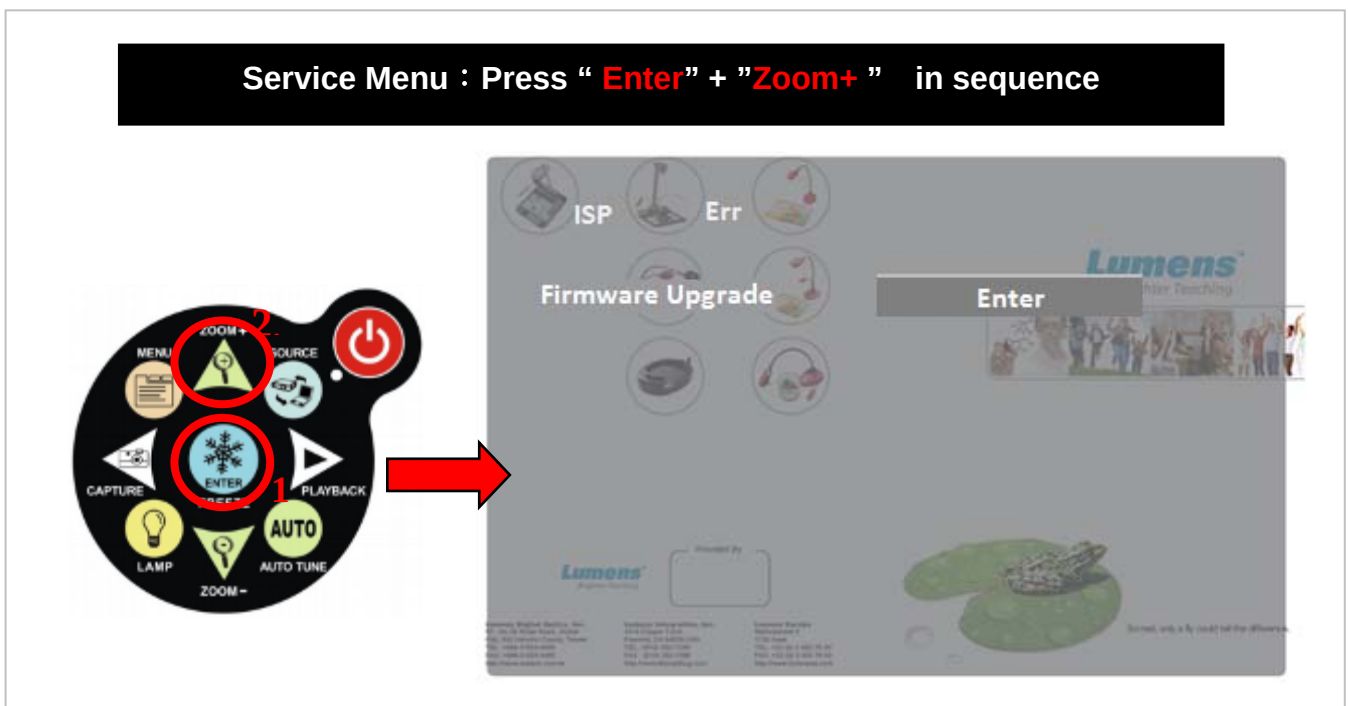

6. Go [ISP] menu, select [Firmware Upgrade] and press [Enter].



7. FW start upgrading.(around 2mins taken)

**\*Note: Please do not stop the upgrading process which may cause the unit not work properly.**



8. Restart the unit after upgrading successfully.  
(Unplug and re-plug the power cord to take effect.)



## 9. Check FW version on OSD.

([Menu]→ [Setting]→ [Advanced]→[Firmware Version])



Master FW version