

VC-A20P Firmware Upgrade Instruction

1 Device and Tool Preparation

 
1.1 Please prepare following devices and tools before FW upgrade.

VC-A20P	PC or Laptop
	 or
Monitor	USB to Micro USB cable
	
Power adapter and power cord	
	

2 Connections for FW upgrade


2.1 Plug in the power cord and connect the VC camera with a monitor.

2.2 Connect the VC camera(Micro USB) with a PC/ Laptop

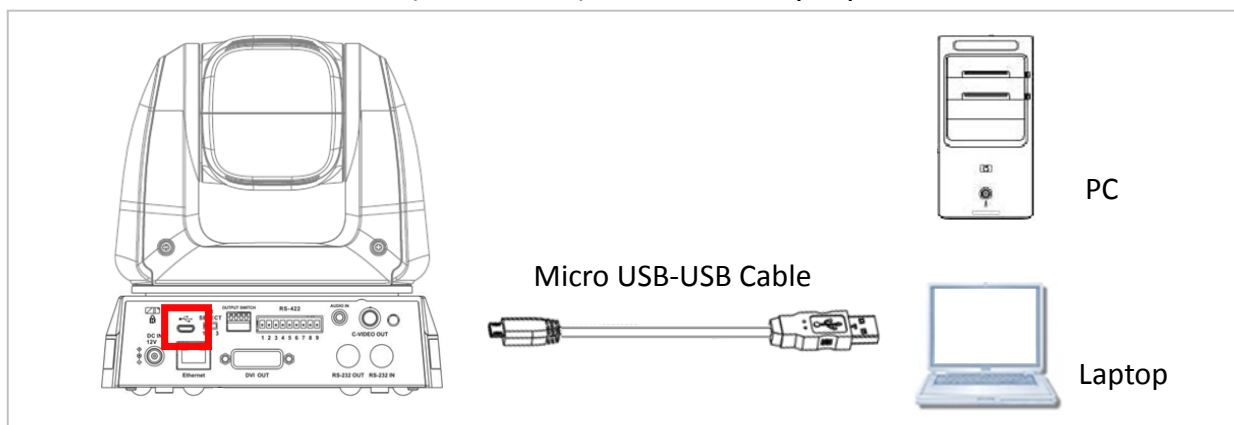


3 FW Download Procedure

 3.1 After the micro USB-USB cable connected, it will be detected as a USB device.
Please go [My Computer]-->[Removable Disk]

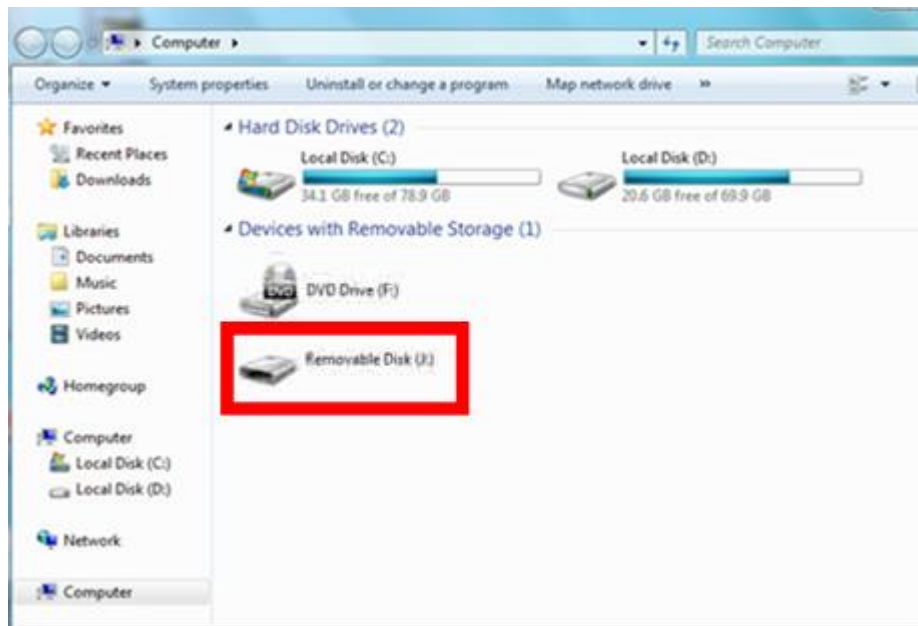

3.2 Make sure the disk is empty and put the FW “**VCTxxx.bin**” in the disk

 3.2.1 If there are files in the disk, please delete all the files first.

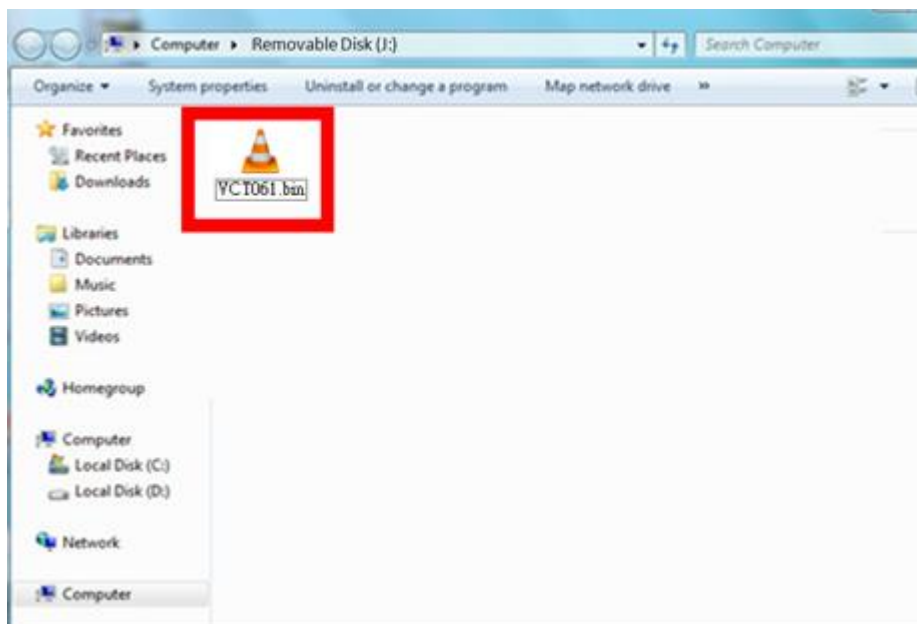


3.3 Press [Menu] on remote control and select
[System]--> [FW Upgrade]--> [On]--> [Enter].



3.4 FW is detected. (Around 10 seconds taken)



 3.5 FW download started. (Around 1 minutes taken)

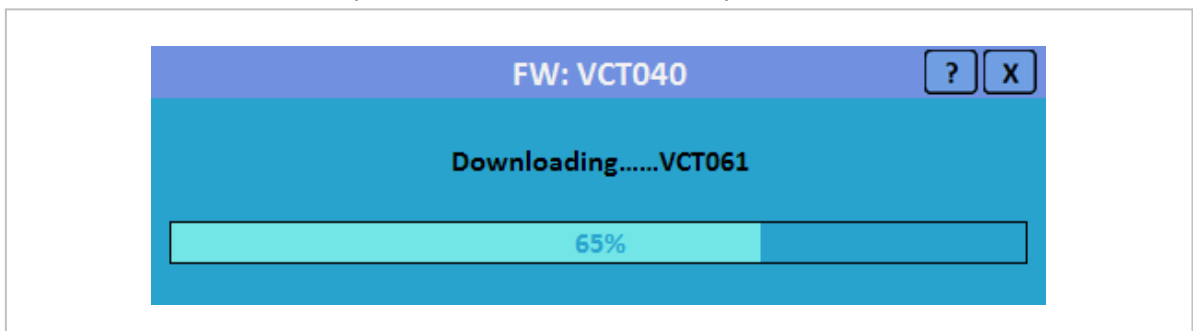

3.6 FW download finished. Please unplug and reconnect the power cord to take effect.

FW Downloaded OK, reboot system now !

3.7 Go next step to confirm if the FW version is correct.

4 Check FW version on OSD

4.1 Power on the unit and press [Menu] button on the remote control

4.2 Select [Status]

4.3 Go to [System] on the last page.

4.4 Check if the FW version is correct.



Exposure
White Balance
Picture
Pan Tilt Zoom
D-effect
Auto Focus
Ethernet
System
Status

[System] 8/8(UP/Down)
C-Video NTSC CP
Prompt Off
IR Receive On
Language English
Output Mode 1080p/60
Factory Reset Off
FW Upgrade Off
Serial No: V14A09999
FW: VCT061