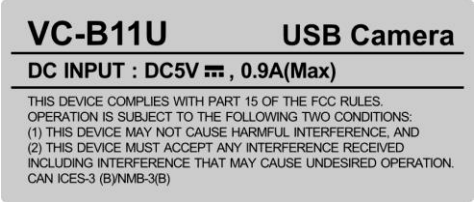
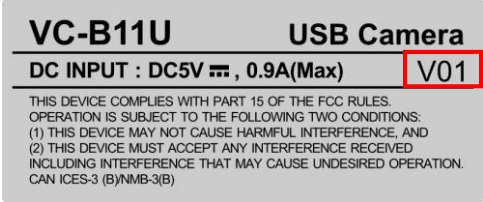



VC-B11U / VC-B11U,V01

Firmware(FW) Update Manual

1 Label / Serial number identification:

Model	VC-B11U	VC-B11U,V01
Label		
SN	VBAxxxxxx	VBZxxxxxx / VC4xxxxxx
FW ver.	V5.2.xx	V8.1.xx

2 Tools

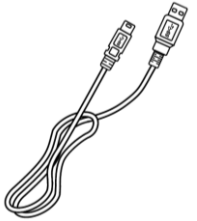USB 3.0 cable (type A to C)	Windows PC / Laptop
	

3 Notification before Upgrade

Please check the current version to upgrade proper FW.

3.1 Current FW **before** V5.2.31(included)


=>Upgrade to FW **V5.2.33** first, and then upgrade to the latest version.

3.2 Current FW **after** V5.2.33

=>Upgrade to the latest version directly


4 FW upgrade

4.1 Connect the VC-B11U to PC/Laptop.

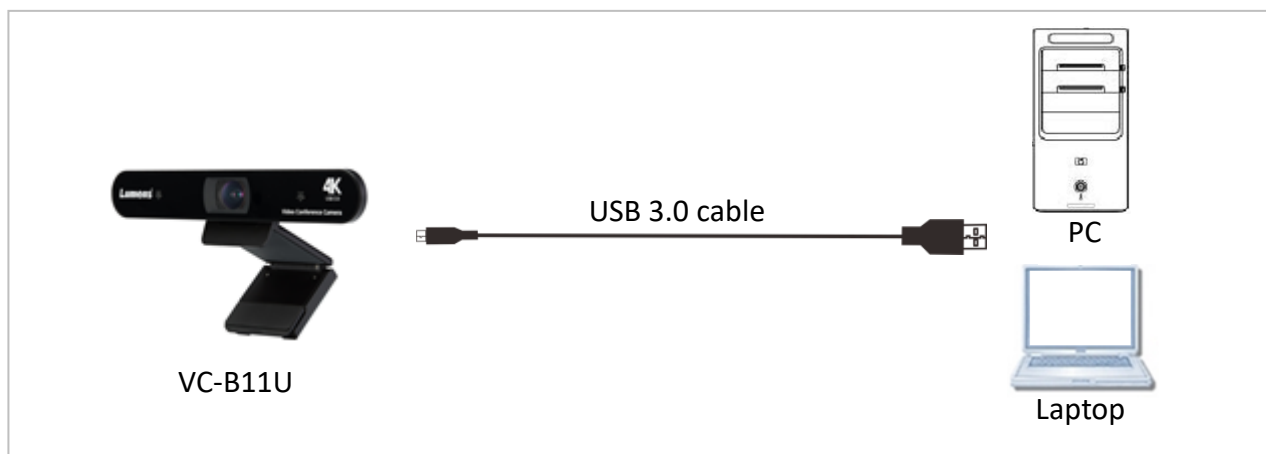


4.2 Launch the [LoadFwUsbMassStorage] FW update tool.


- It will auto-detect the firmware version of the unit and show on the "Version".

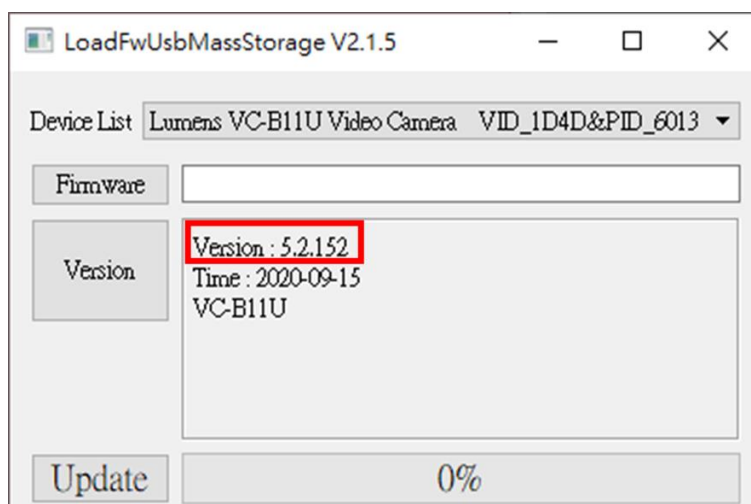


4.3 Press [Firmware] to select the FW file.

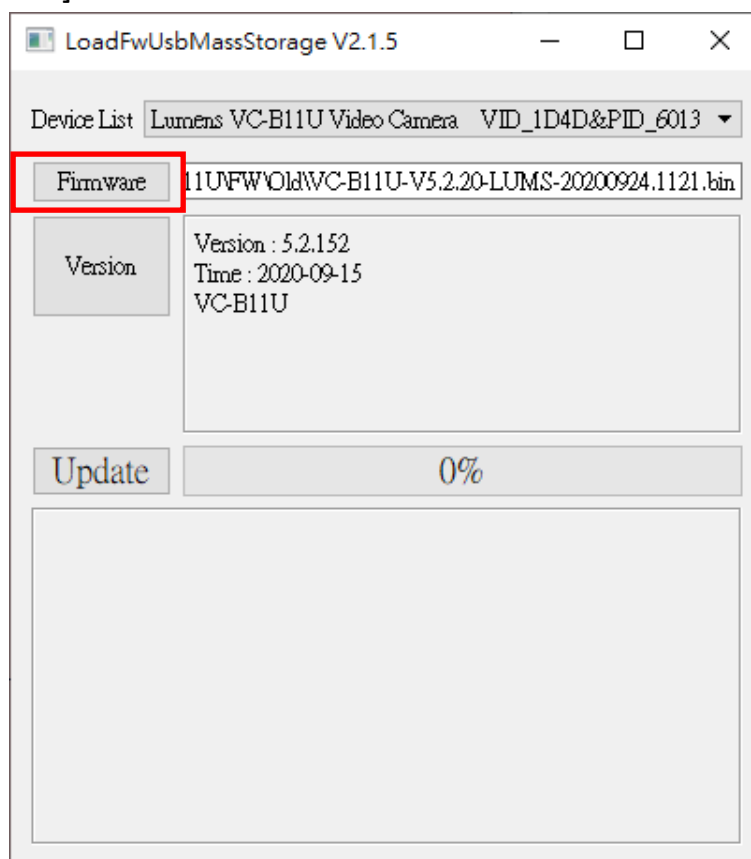

4.4 Press [Update] to start FW update.

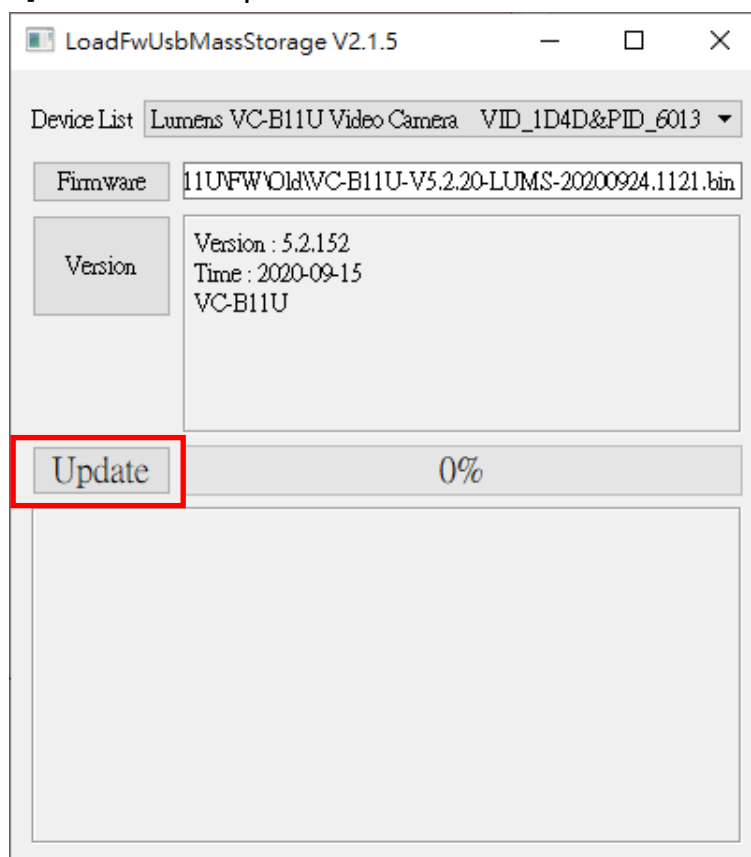

4.5 FW updating. (Around 30sec - 1 mins taken)

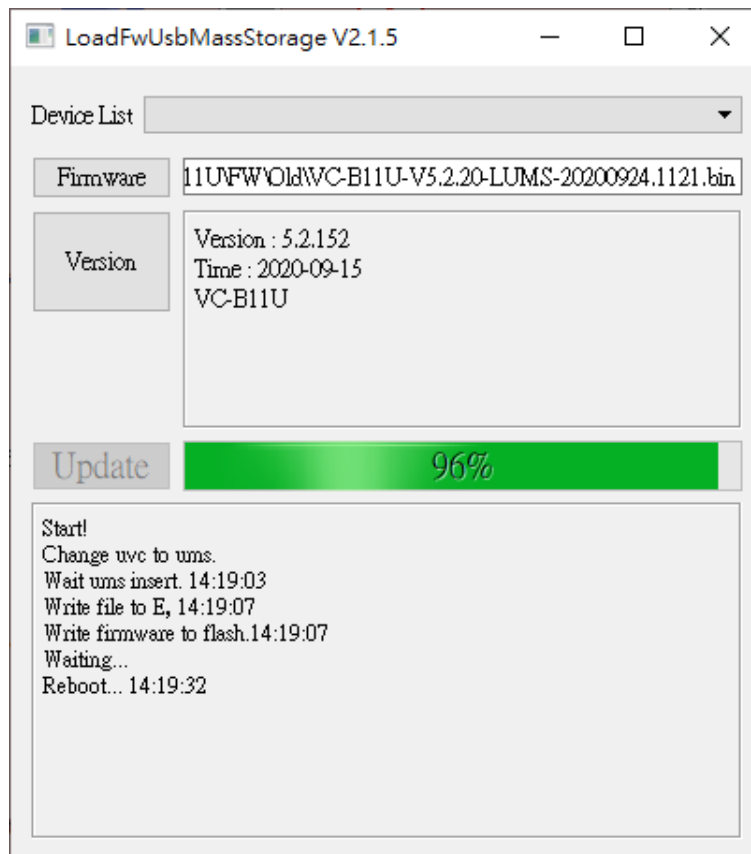

4.6 FW update successfully.

- VC-B11U will reboot and [Success] will display on the tool.
- The new FW version will also show on the “Version”.

