

VC-B2U Firmware(FW) Upgrade Instruction

1 Tools

VC-B2U	Windows PC / Laptop
	 Or 


2 FW upgrade

2.1 Before FW update, please go to Device Manager to disable all cameras of your computer, includes the webcam of laptop.




2.2 Connect VC-B2U to USB port of computer.

2.3 Launch the VC-B10U FW Update tool “**Common USB BurnerAP**”.

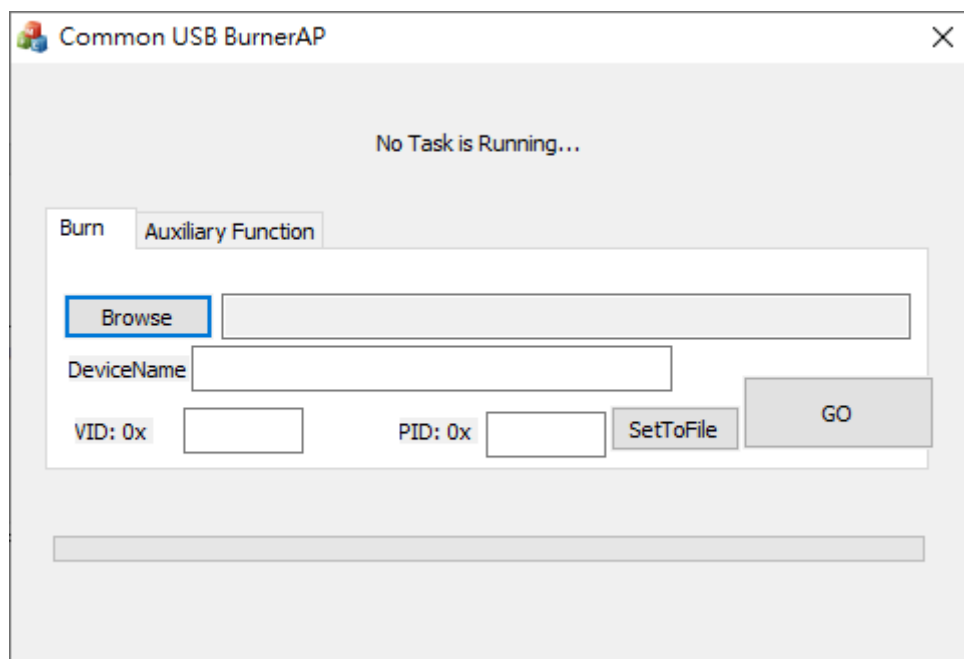

2.4 It will auto detect the firmware version of the unit.

You can click [Auxiliary Function] > [F/W Version] to check firmware version.

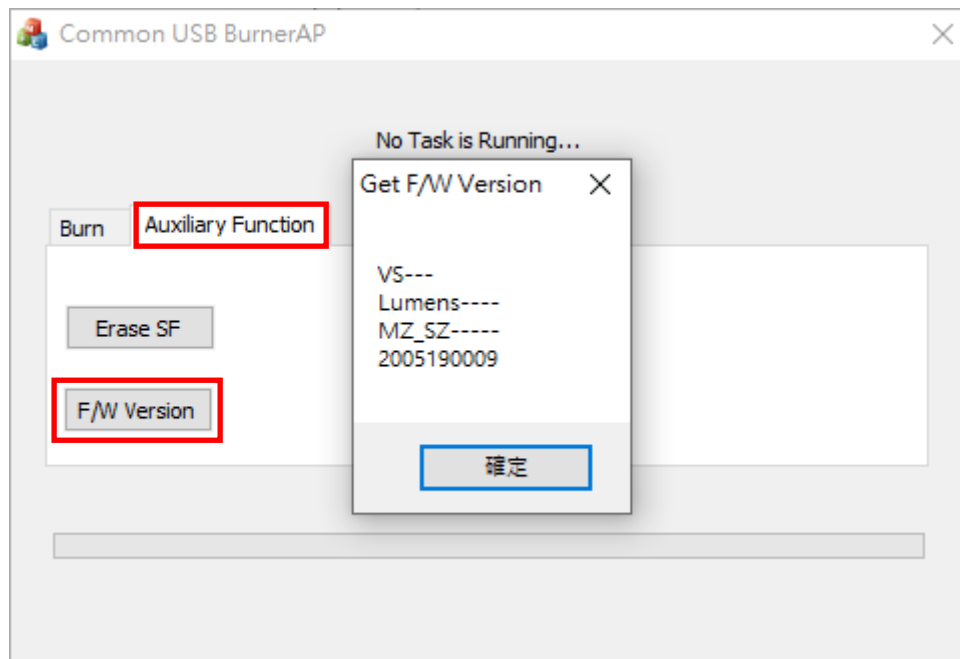

2.5 Click [Browse] to select VC-B2U FW and then press [GO] to start FW update.

It may take 1 min to finish the the FW update.

After the process bar show OK, please turn off the application.

